

⚠ Wiring Diagram S20 - ML4 - SMT - BMA

- (1) Please use a good quality high current connector which is reverse polarity protected.
- (2) We recommend at least 1,5mm² (AWG16) for battery and motor wires.
- (3) Make sure that all motors are fitted with a suppressor kit (2 or 3 capacitors).
- (4) The servo cable between S20 and receiver is the power supply for all servos (BEC).

- (5) You might connect plus of all lamps to battery plus or "+ Light" of the S20 as well.
- (6) You can also use LEDs instead of lamps but don't forget appropriate resistors. We recommend our Servonaut LED-Set.
- (7) At least servo cables 1 and 2 of the BMA must be connected to the receiver. The Hydraulic pump switch BMA can only be used together with an SMT, not with the SMX.
- (8) Typical use of channels shown for Robbe/Futaba radios. The channel numbering might be different for other radios and setups.

